

## Safety Instructions

For your safety, please read this quick guide thoroughly before operating the charger. Keep this guide for future reference.

### WARNINGS

**Use only with USB-C-compatible devices.** Failure to do so releases MAHLE SmartBike Systems from any responsibility.

**Risk of fire or electric shock.**

Always follow the following basic safety precautions when using this product.

1. This charger may only be used by children aged 8 or older and by people with reduced capabilities or limited experience if supervised or properly instructed and aware of the risks. Children must not play with the charger.
2. Do not use the charger if it shows any external damage or if the power cord or output cable is frayed, has broken insulation, or shows any other signs of damage.
3. Never charge the battery if ambient temperatures fall outside the recommended operating range.
4. Water inside the charger can cause a short circuit and fire. Do not pressure-wash the battery or charger, submerge them in water, or expose them to rain or snow.
5. Do not expose the charger or battery to solvents (e.g., thinner, alcohol, oil, anticorrosive(s) or other chemicals (e.g., detergents) that could damage their surfaces.
6. Chargers are designed for indoor use only. When connecting the charger to the battery, ensure that both connectors are dry and clean.
7. Always supervise the charging process. Disconnect the charger from the battery once charging is complete. Do not leave the charger connected overnight or unattended. If you detect a problem during charging disconnect the charger immediately.
8. The charger may become warm during use. Place it on a stable, heat-resistant surface with adequate ventilation. Do not place it on rugs, carpets, or cover it during charging, as this could cause a fire. If the charger remains hot after charging, it may be damaged and should be replaced.
9. Do not open, disassemble, or modify the charger. Do not touch any live components.
10. Do not use products with broken seals. Return them immediately for appropriate service or recycling.
11. Do not allow metal objects such as keys, coins, or screws to come into contact with the charger's connector.
12. In case of fire, follow these steps immediately:

Disconnect the charger from the power outlet.

Prioritize your personal safety.

Contact emergency services.

## Recycling and environmental care

**EUROPE:** According to European Guideline 2012/19/EC, electronic devices/tools must be recycled separately and disposed of in an environmentally friendly manner.

Please also consider the regional regulations in your country.

Please contact your dealer or the eBike manufacturer to ensure that the recycling process is correct. MAHLE Smartbike Systems, S.L.U. is registered with the Spanish Government for waste management under RII-AEE 8233 and ENV/2023/000030717 in compliance with EU Directives 2012/19/EU and 2019/904/EC, respectively.



COMPLIES WITH FCC PART 15 RULES. CAN ICES (B) / NMB (B)

MAHLE SmartBike Systems S.L.U. declares that the USB-C Wall charger complies directive 2014/35/EU (LVD) and the Harmonized Standard of reference.

For more information about this product, please visit <https://mahle-smartbike.com/>

